



HP Mini 1000 Camera Board Cable Replacement


Written By: Walter Galan



INTRODUCTION



This guide is an internal prereq only.

Step 1 — Camera Board Cable

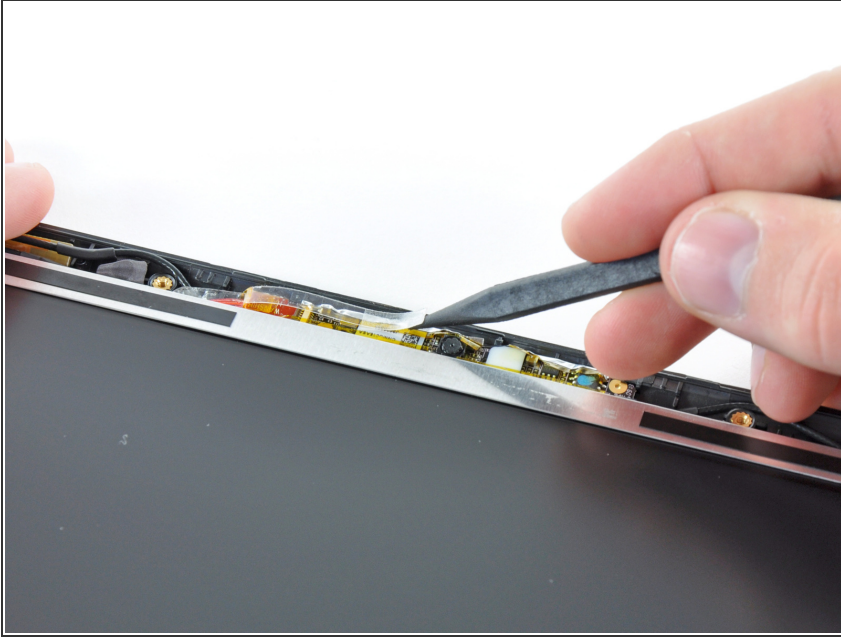

- Use the sharp end of a spudger to flip up the plastic flap that rests on top of the camera board cable ZIF socket.

Step 2

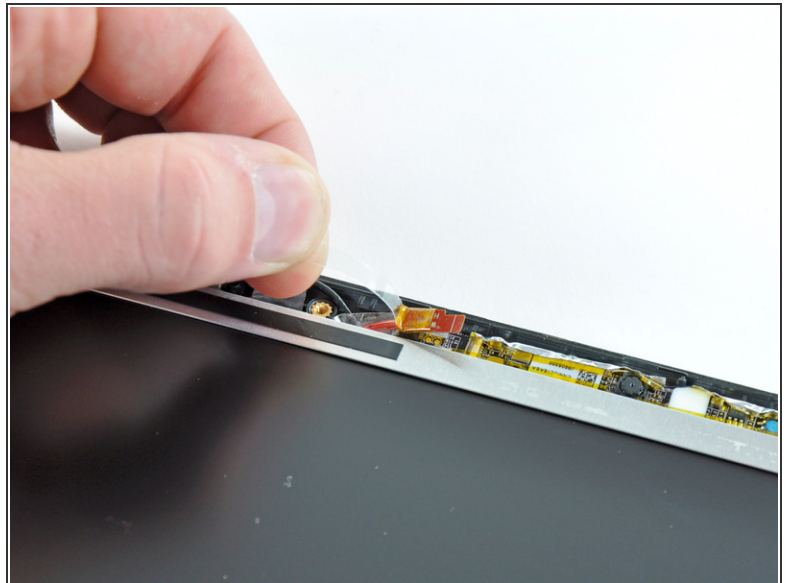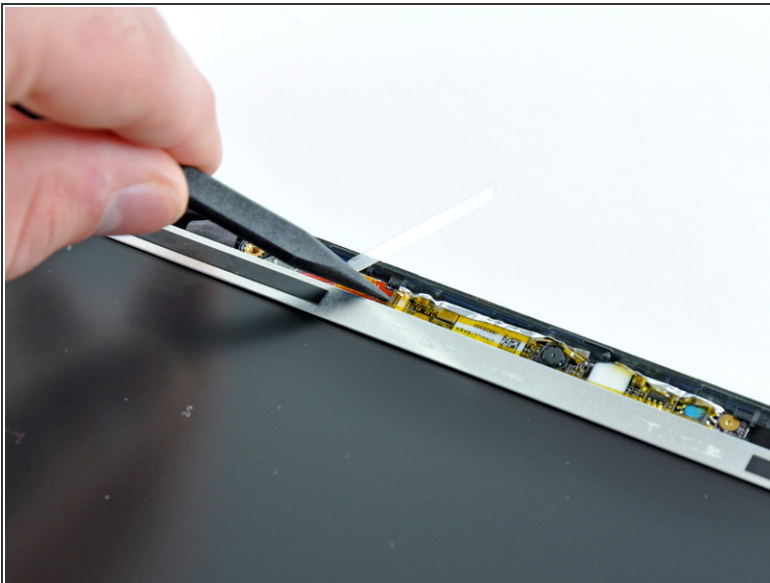

- Use your fingernail or the sharp end of a spudger to flip up the retaining flap on the camera board cable ZIF socket.

⚠ Be sure you are prying up on the retaining flap, not the socket itself.

- Pull the camera board ribbon cable out of its socket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 04:13:42 PM.